OPERATING MANUAL FOR ALL MODELS OF



EASY-LOAD® PUMP HEADS





Cole-Parmer Instrument Co.

1-800-MASTERFLEX (627-8373) (U.S. and Canada only) 11 (847) 549-7600 (outside U.S.) (847) 549-7600 (Local) www.masterflex.com

Barnant Company

1-800-637-3739 (U.S. and Canada only) 11 (847) 381-7050 (outside U.S.) (847) 381-7050 (Local) www.barnant.com



A-1299-0722 Edition 03



WARNING: PRODUCT USE LIMITATION

This product is not designed for, nor intended for use in patient connected applications; including, but not limited to, medical and dental use, and accordingly, has not been submitted for FDA approval.

NOTE: Use only MASTERFLEX precision tubing with MASTERFLEX pumps to ensure optimum performance. Use of other tubing may void applicable warranties.

These products are covered by the following U.S. and corresponding foreign patents: 4,925,376; 5,082,429 Printed in U.S.A. 031101

INTRODUCTION AND GENERAL DESCRIPTION

This EASY-LOAD Pump Head when combined with a MASTERFLEX[®] I/P[®] drive or compatible system is designed to provide a simple easy-to-use peristaltic pump system. The Pump Head accepts 3 different tubing sizes for a wide range of flow rates. The unique over-center cam design and automatic tubing retention allows quick tubing changes and greatly reduced maintenance time.

Each pump is supplied complete with a 20 in (50-cm) length of tubing, one mounting hardware package and this manual. A flat-bladed screwdriver is required to complete installation.

DRIVE COMPATIBILITY AND SETUP

The I/P EASY-LOAD Pump Head is available in two drive shaft lengths depending upon the drive chosen. The short shaft versions have a standard tang interface. Mount the pump head using the 5 screws provided. **(See Figure #1.)**

NOTE: Raise occlusion bed to expose mounting holes for top 2 short screws.

TUBE LOADING

- 1. Be sure the pump drive is turned off.
- 2. Move the lever to the left to open the pump.
- 3. Load the correct tubing. (Figure #2.)
- 4. Move the lever to the right to close. (Fig. #3.)

WARNING: Stop the drive when changing the

\triangle

tubing or its position in the rotor mechanism (the rotor is partially exposed when the LOADING LEVER is in the open

position). **NOTE:** For optimum tubing life, keep tubing straight when entering and exiting the pump.

OCCLUSION ADJUSTMENT

Adjust occlusion setting on top of pump head. (Figure #4.)

- "3" for nominal performance;
- "4" or "5" for increased pressure/vacuum with reduced tubing life;
- "1" or "2" for longer life with less pressure and vacuum.

NOTE: For optimum performance turn knob to "1" after loading. Start drive and adjust knob until pump primes and fluid begins to flow.

NOTE: Occlusion usually does not need to be readjusted when changing tubing.

NOTE: After operation for some time, the retainer teeth may scratch or mark the surface of the tubing. This is normal and will not cause leaks or otherwise reduce tubing life.

Figure #1. Setup

 


Figure #2. Open and Load



Figure #3. Close Pump







MULTI-CHANNEL MOUNTING

I/P EASY-LOAD Pump Heads can be mounted in tandem depending upon the torque capabilities of the drive. A standard short shaft pump head is required for the add-on head along with special mounting hardware. (See Figure #5.) See REPLACEMENT PARTS AND ACCESSORIES for mounting hardware.

CAUTION: DO NOT OVERTIGHTEN SCREWS OR WING NUTS.

- **NOTE:** The I/P EASY-LOAD Pump Head can be used in any combination with other 7019-series Pump Heads.
- **NOTE:** The tubing on the inside EASY-LOAD Pump Head can be changed without removing the outside pump head.





MAINTENANCE AND CLEANING

No lubrication is required for the I/P EASY-LOAD pump head. Use a mild detergent solution to clean the pump head.

REPLACEMENT PARTS AND ACCESSORIES

A. Main body assembly (occlusion bed with rear bearings).


Pump Head number	PSF order number	Pump Head number	PPS order number
77601-00, -02	77601-07		
77601-10, -12	77601-17	77601-60,-62	77601-67

B. Rotor/bearing support assembly.

Pump Head number	Short shaft order No.	Pump Head number	Long shaft order No.
77601-00	77601-08	77601-02	77601-28
77601-10	77601-18	77601-12	77601-38
77601-60	77601-68	77601-62	77601-88

C. Tubing retainer kit

Includes two retainer assemblies, back plate and screws.

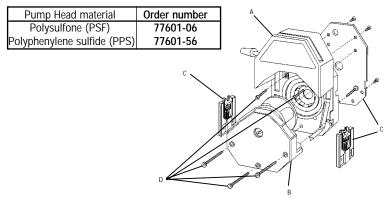

D. Mounting hardware for I/P EASY-LOAD pump heads.

Number of heads to be mounted	Stainless steel order number
1	77601-95
2	77601-96

SPECIFICATIONS

Pump Head number	Housing Material	Shaft Length	Tubing
77601-00	PSF/CRS	Short	I/P [®] 26, 73, 82
77601-10	PSF/SS	Short	I/P [®] 26, 73, 82
77601-02	PSF/CRS	Long	I/P [®] 26, 73, 82
77601-12	PSF/SS	Long	I/P [®] 26, 73, 82
77601-60 77601-62	PPS/SS PPS/SS	Short Long	I/P [◎] 26, 73, 82 I/P [◎] 26, 73, 82

	I/P [®] 26, I/P [®] 73	I/P [◎] 82	
Maximum continuous discharge pressure—psi (bar):	25 (1.7)*	10 (0.7)*	
Maximum intermittent discharge pressure—psi (bar):	40 (2.7)*	20 (1.4)*	
Maximum vacuum: Maximum suction lift:	660 mm (26) in Hg* 8.8 m (29 ft) H ₂ 0*	610 mm (24) in Hg* 8.2 m (27 ft) H ₂ O*	
Number of rollers:	3		
Occlusion:	Adjustable (with Knob on top of Pump Head)		
Maximum pump speed (rpm):	650		
Nominal torque load-Starting: Nominal torque load-Running:	up to 13 kg-cm (180 oz-in) up to 9 kg-cm (120 oz-in)		
Housing materials: Polysulfone (PSF) or Polyphenylene sulfide (PPS), Polyester, Aluminum, NylonRoller/rotor materials:Cold-rolled steel (CRS) or Stainless steel (SS)			

Operating temperature[‡]:

0 to 40°C (32 to 104°F)

* Testing with NORPRENE®, PHARMED® and TYGON® tubing. Values will be less with silicone and C-FLEX®.

[‡] Use in this temperature range for continuous duty operation with no decrease in performance or product life. Pump heads will work outside this range with some possible reductions in performance or product life.

WARRANTY

Use only MASTERFLEX precision tubing with MASTERFLEX pumps to ensure optimum performance. Use of other tubing may void applicable warranties.

The Manufacturer warrants this product to be free from significant deviations from published specifications. If repair or adjustment is necessary within the warranty period, the problem will be corrected at no charge if it is not due to misuse or abuse on your part, as determined by the Manufacturer. Repair costs outside the warranty period, or those resulting from product misuse or abuse, may be invoiced to you.

The warranty period for this product is noted on the Warranty Card.

PRODUCT RETURN

To limit charges and delays, contact the seller or Manufacturer for authorization and shipping instructions before returning the product, either within or outside of the warranty period. When returning the product, please state the reason for the return. For your protection, pack the product carefully and insure it against possible damage or loss. Any damages resulting from improper packaging are your responsibility.

TECHNICAL ASSISTANCE

If you have any questions about the use of this product, contact the Manufacturer or authorized seller.

